


Rotary Pump with Drip Pan Kit # 272212 Assembly Instructions

READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE THE ROTARY PUMP DRIP PAN. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. CONTACT THE FACTORY IF YOU HAVE ANY PROBLEMS AFTER READING THESE INSTRUCTIONS, OR FOR PARTS INFORMATION AND PARTS ORDERING.

Specifications

The Wesco Industrial Products, Inc. Rotary Pump with Drip Pan is designed to reclaim all drips and spills back into the drum.

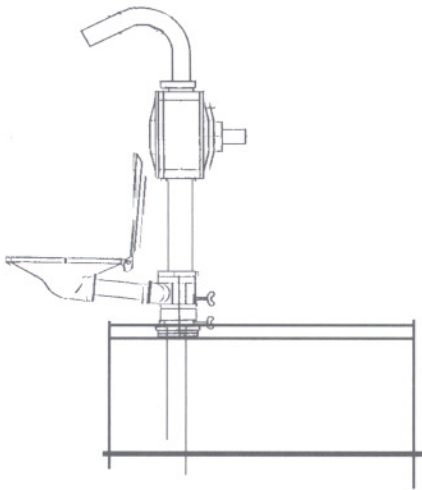


Unpacking

When unpacking your Wesco Rotary Pump, check carefully for shipping damage. If damage has occurred, file a claim with the delivering carrier within 24 hours and notify the dealer from whom you purchased the unit.

This product is sold by:
Wesco Industrial Products, Inc..
P.O. Box 47
Lansdale, PA 19446
Tel: 215-699-7031
Fax: 215-699-3836

Assembly

1. Install the Drip Pan Coupling (A) to your drum.
2. Slide the Pump Suction Tube (B) through the Drip Pan Coupling into the drum leaving approximately 6 - 8 in. (152.4 - 203.2 mm) extended above the drum head as shown.
3. Tighten the Coupling Screws (C) to hold the tube in place.
4. Screw the threaded Drip Pan Pipe into the Coupling.
5. Install the Drip Pan to the Drip Pan Pipe. Open the Drip Pan Cover and your unit is ready for use.

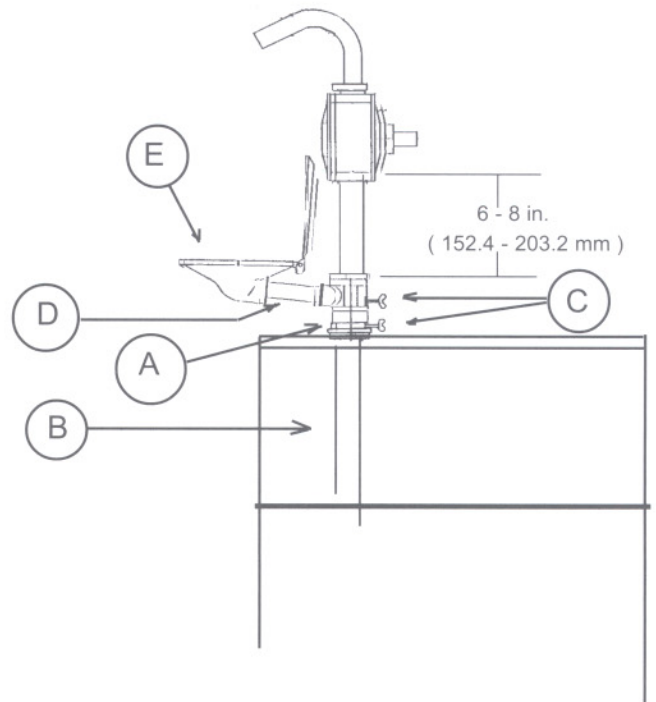

Drip pans are also sold separately. Ask for #272211.