



**DRIFORCE®**


AirWolf  
F228

DriForce  
F211-BU



**AIRWOLF/  
WOLFPACK**

**RESCUE MAT®**

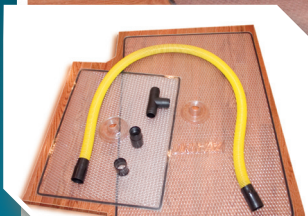

**HARDWOOD  
FLOOR DRYING**

Virtual Training Center  
**VTC**

Dri-Eaz tools and systems equip you for successfully managing the challenges of hardwood floor drying. Wood floors are highly vulnerable to water damage, but by using Dri-Eaz floor drying systems, in many cases these expensive floors can be returned to like-new condition.

## DRIFORCE® INTERAIR DRYING SYSTEM

Dry walls and hard to reach places without damage

- » Speed up the drying of wall cavities, behind cabinets, under stairwells and tubs
- » Small ¼ in. holes are easy to repair
- » Use positive or negative pressure to force air in or vacuum air out
- » Dries up to 90 linear feet of wall space
- » Low amp draw

### ITEM #F211

\$2,009 SUGG. LIST (US)

#### COMPLETE SYSTEM INCLUDES:

- |                            |                             |
|----------------------------|-----------------------------|
| 1 DriForce Airmover        | 5 coupler fittings          |
| 13 7 ft. hoses w/ cuffs    | 2 T-fittings                |
| 8 manifolds                | 25 tube extender connectors |
| 1 400 ft. PVC tubing       | 1 muffler                   |
| 100 ¼-in. injector nozzles | 2 wheeled duffel bags       |
| 4 manifold end caps        |                             |

## DRIFORCE AIRMOVER UNIT ONLY: ITEM #F211-BU

\$1,495 SUGG. LIST (US)

### DRIFORCE AIRMOVER SPECS

MODEL	F211
DIMENSIONS (H x W x D)	14 x 14 x 12 in. 36 x 36 x 30 cm
WEIGHT	14.5 lbs.   7 kg
MOTOR SPEEDS	1-speed
MAX. STATIC PRESSURE	38 in.   97 cm
MAX POWER 115V	4.8 amps
AVG. POWER 115V	3 amps
STACKABLE	Yes
SAFETY	UL, C-UL Listed

## RESCUE MAT® HARDWOOD FLOOR DRYING SYSTEM

Dry out water-damaged hardwoods from above

- » Just one hose connection per mat offers quick setup
- » Gasketed edge creates powerful, automatic seal—no tape needed
- » Two mat sizes allow mix-and-match versatility to customize any job
- » DriForce draws out trapped water vapor
- » Use with a portable flood extractor to extract water from below hardwood floor
- » Combine with the AirWolf/WolfPack for fastest drying of hardwood floors.

#### COMPLETE SYSTEM INCLUDES:

- 4 46 x 30 in. mats
- 2 23 x 30 in. mats
- 3 7 ft. hose with cuffs
- 2 Connector sleeves
- 5 T-connectors
- 1 Gasket roll

ITEM #F286 \$570 SUGG. LIST (US)

## ADDITIONAL RESCUE MAT PANEL KIT

#### PANEL PACKAGE INCLUDES:

- 4 46 x 30 in. mats
- 2 23 x 30 in. mats

#### LARGE PANEL PACKAGE INCLUDES:

- 6 46 x 30 in. mats

### ITEM #F287

\$409 SUGG. LIST (US)

### ITEM #F450

\$495 SUGG. LIST (US)

## AIRWOLF/WOLFPACK FLOOR DRYING SYSTEM

Dry hardwoods fast with AirWolf and WolfPack Kit

- » Unbeatable combination of up to 800 CFM and 7 inches of static pressure
- » Drives water from beneath damaged hardwood floors through flutes using positive "push."
- » Works on many floor types and includes flexible ducting and three TurboVents
- » Accelerates airflow at bottom of hardwood for increased evaporation.

### AIRWOLF ITEM #F228

\$570 SUGG. LIST (US)

### WOLFPACK ITEM #F243

\$570 SUGG. LIST (US)



PROUDLY  
BUILT IN USA



**RSALABS**

## Watching the floor dry?

RSA Labs recently conducted drying tests on various types of wood floor materials. The question? "Which kind can be saved, and which can't?"



## Here's a summary of RSA's findings:

"We found out that whether hardwood was glued, nailed or nailed over tar paper – it could all be dried in a reasonable time. But what about damage? Bamboo and true hardwood showed no surface damage and dried well. Engineered hardwood, however, showed surface damage after drying, and may have to be discarded."



**Kevin Fisher**  
Education Program  
Manager, RSA

To see Kevin's full report,  
visit [www.rsalabs.net](http://www.rsalabs.net) or scan  
this code on your device



WWW.DRI-EAZ.COM | 800-932-3030