


# Oil-Only DrumTop Pads #BTOP - 23", 25 pads/package

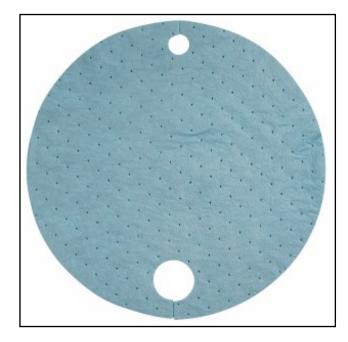

Say goodbye to messy drop tops by using these Sorbent Oil-Only Drum Top Pads.

 Absorb drips from leaking pumps and help keep drum storage areas looking good. Pre-cut bung holes make for easy access to drum. Pads can be removed and replaced with pumps and valves installed. Made from top-quality FineFiber Mat. Colorcoding helps you visually identify the right sorbent for your needs. Blue designates Oil-Only sorbency for oil and other petroleum-based fluids — but not water; fits into many professional surroundings.

## **BTOP Specifications**

Dimensions:	ext. dia. 23"
Shipping	23" W x 23" L x 4" H
Dimensions:	
Sold as:	25 pads per package
Color:	Blue
Composition:	Polypropylene
Absorbency:	Up to 8.6 gal. per package
Absorbency per:	Up to 44 oz. per pad
# per Pallet:	72
Basis Weight:	HeavyWeight
Incinerable:	Yes

## **Metric Equivalent Specifications**

Dimensions:	ext. dia. 58.4cm
Shipping	58.4cm W x 58.4cm L x 10.2cm H
Dimensions:	
Absorbency:	Up to 32.6 L per package
Absorbency per:	Up to 1.3 L per pad



Online: spilltech.com





Email: sales@spilltech.com

5440 McGinnis Village Place, Ste. 102 • Alpharetta GA 30005 © 2013 SpillTech Environmental Corporation. All rights reserved.

# **BTOP Technical Information**

### Warnings & Restrictions:

There are no known warnings and restrictions for this product.

#### **Regulations and Compliance:**

29 CFR 1910.22(a)(2) - Floors in your workplace should be, "maintained in a clean and, so far as possible, a dry condition."

29 CFR 1910.1450(e) - OSHA requires containment and cleanup materials for spills in laboratories to reduce occupational exposure to hazardous chemicals.

29 CFR 1910.120(j)(1) - Under an OSHA requirement, "DOT-specified salvage drums or containers and suitable quantities of proper absorbents shall be kept available and used in areas where spills, leaks, or ruptures may occur."

29 CFR 1910.107(g)(2) - OSHA requires spraying areas to be "kept as free from the accumulation of deposits of combustible residues as practical."

29 CFR 1910.107(b)(3) - If floors in a spray booth or work area are combustible, they "shall be covered with noncombustible material of such character as to facilitate the safe cleaning and removal of residues."

### **Technical Documents:**

(Available at spilltech.com)

Product Data Sheet (PDS) Material Safety Data Sheet (MSDS)







Email: sales@spilltech.com